

CXM

Remote Display for Phocos CXN Charge Controller



- Display panel current, load current, and battery voltage, Ah, SOC, etc
- Clear, readable 3-digit LC Display and symbols
- Two push button to select displayed value
- Prepared for DIN rail and wall mounting

Phocos' CXM can be used in combination with Phocos CXN series charge controllers via interface connector.

Phocos' CXM remote display is designed to display panel current, load current and battery voltage of your PV system as true values and status values like charging, overload, low voltage disconnect as symbols. Additionally you can display several values of CXN's data logger of the past 7 days as Ah, SOC, Battery voltage (morning, evening).

This provides you more detailed information of your PV system.

TYPE	CXM
Voltage Range (V)	Display voltage range of your CXN
Current Range (A)	Display current range of your CXN
Operating Temperature Range	-25 to +50 °C
Length of Connecting Wire	2 m
Dimension (W x H x D)	72 mm x 68 mm x 29 mm
Weight	94 gr (with connecting wire)
Type of Protection	IP22

Phocos AG, Germany
info@phocos.com

Phocos China Ltd., China
Info-china@phocos.com

Phocos India Solar Pvt. Ltd., India
Info-india@phocos.com

Phocos Latin America S.R.L., Bolivia
Info-latinamerica@phocos.com

Phocos Rep. Office Australia, Australia
Info-australia@phocos.com

Phocos Rep. Office Brazil, Brazil
Info-brazil@phocos.com

Phocos Rep. Office Eastern Africa, Kenya
Info-easternafrica@phocos.com

Phocos Eastern Europe S.R.L., Romania
Info-easterneurope@phocos.com

Phocos SEA Pte Ltd, Singapore
Info-sea@phocos.com

Phocos Rep. Office South Africa
Info-sadc@phocos.com

Phocos Tunisia
Info-maghreb@phocos.com

Phocos USA
Info-usa@phocos.com